

Braille3D



BRILLE3D


S2K Identity Systems offer a range of Braille and Tactile signage - Braille3D.

Braille3D signs are available in a variety of compliant materials and finishes.

All Braille3D signs include both the tactile elements (raised letters and symbols) and the Braille.

Features and Benefits

- Compliant with Australian Standards
- Standard stock range offered
- Custom sizes and layouts
- Easy to clean
- Simple to install
- Durable

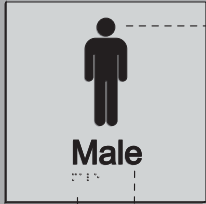

Symbol must be raised
Symbols must be centered
Colour of symbol must be a strong contrast to the background colour

Sign must include text
Text must always be raised
Text to be left justified under the symbol
Colour of the text must be a strong contrast to the background colour

Braille must be Grade 1
Braille must be left justified under the text
The background colour must be a strong contrast to the raised symbol and text

BRILLE SIGNS

Braille and Tactile Signage is a requirement of the Australian Building Code section D3.6 Signage must meet Australian Standards section 1428.

All Braille signs must have both the tactile elements - i.e. symbol or text, and Braille. Just one or the other render the signs non-compliant. Both elements MUST be included in all signage for the blind and visually impaired.

Braille and Tactile Signs are required for:

- Sanitary Facilities
- Accessible Areas
- Indication of nearest Accessible Sanitary Facility
- Area and Room Identification

A small selection of what is available



COLOURS & FINISHES

Available Background Materials:

- Trefolyte
- Acrylic
- Aluminium
- Stainless Steel

Colours of raised elements:

- Black
- White
- Grey

Custom colours are available on request

Accessible Signs:

Any sign that includes the Accessible Symbol (Wheelchair) MUST have an Ultramarine Blue background with white symbols and white raised text as per International Standards.

SIZES

We offer a range of standard layout and sizes. Please request our Stock List for more detailed information.

Custom sizes and layouts are available on request.


INSTALLATION

Braille3D signs can be installed with double sided tape.

Braille signs must be installed at a height between 1200mm and 1600mm high.

Braille signs must be installed adjacent to the door.

For more information on Braille and Tactile signage specifications, please contact S2K Identity Systems

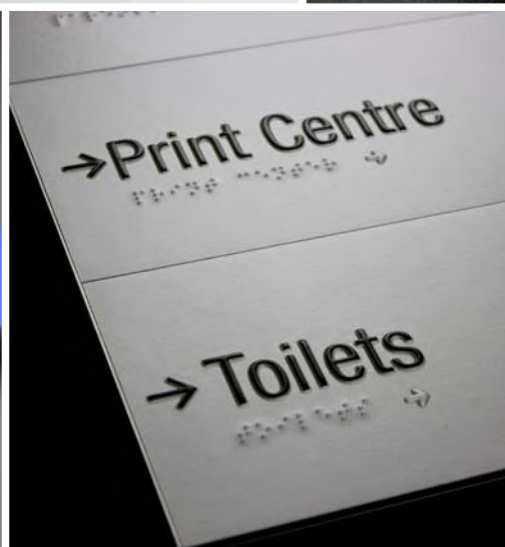

CONTACT DETAILS

S2K Identity Systems
9 Lennox Street, Moorabbin, Victoria, Australia 3189

T: 613 9555 7473 F: 613 9555 7579
E: info@s2k.com.au W: www.s2k.com.au

