

Meeting room 2

*Monthly
Sales Meeting*

*Monday
10.00am*



The Bulletin Board Series

THE BULLETIN BOARD

The Bulletin Board Series is a modular sign system tailored to meet the requirements of individual customers. They are designed to provide an efficient and effective means of displaying and interchanging graphic information with minimal investment of time or resources.

Computer generated graphics can be produced quickly and easily by the user, enabling signage to be amended or updated whenever required.

Due to the slim profile, the Bulletin Board can be integrated with our other system, the Architectural Modular Series. Combining the two systems enables the introduction of Headers, Footers and side panels thus adding further options to your signage design and layout.

For information on the Architectural Modular Series (AM Series) please contact S2K Identity Systems.

HOW THE BULLETIN BOARD WORKS

The Bulletin Board consists of an aluminium backing panel that forms a C channel, a non glare acrylic cover and flexible End Caps.

The Bulletin Board Series is extremely easy to use, requiring no tools or clip devices to change graphic information.

HOW TO OPERATE

Simply slide the acrylic cover to one side, approximately halfway out of the unit; the flexible End Cap will simultaneously open. Remove and replace the paper insert by sliding it under the acrylic cover, then slide the acrylic back into its original position.

The End Cap will spring back into place firmly securing the entire unit.

NOTE: The Bulletin Board Series is suitable for interior use only as it is not water proof.


OPTIONAL INSERTS INCLUDE

- Lightweight cardboard
- Clear acetate
- Photographic material

Only one piece of paper can be inserted at a time; do not attempt to insert multiple sheets.

NOTE: Please contact S2K Identity Systems if lightweight cardboard or photographic material is to be used. These units require modification during manufacture for these materials.

A4P Bulletin Board with a Header and Footer

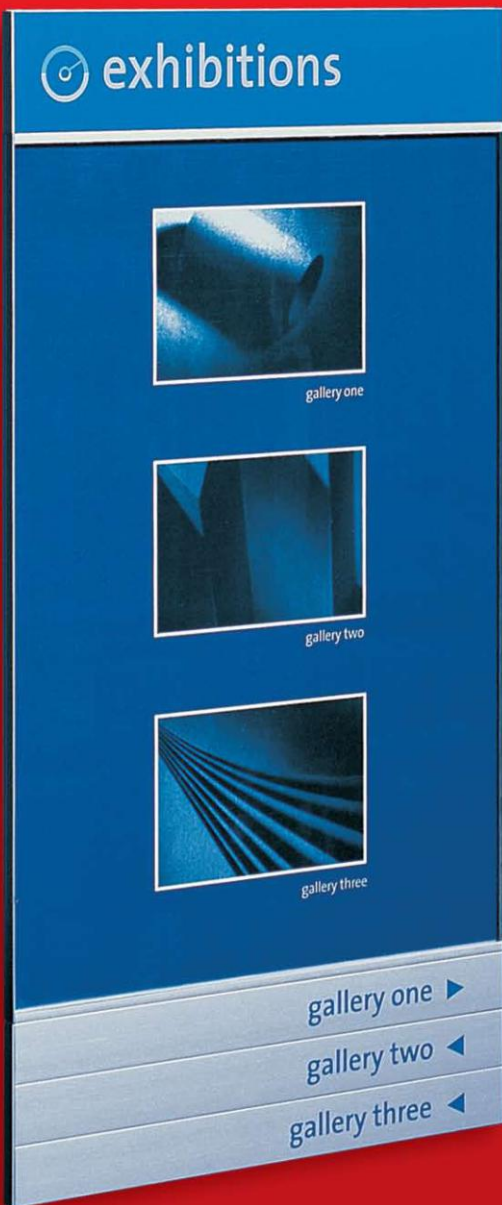

D3 Bulletin Board




B2.3 Bulletin Board



B3 Bulletin Board



C4 Bulletin Board with AM Series sign on left hand side

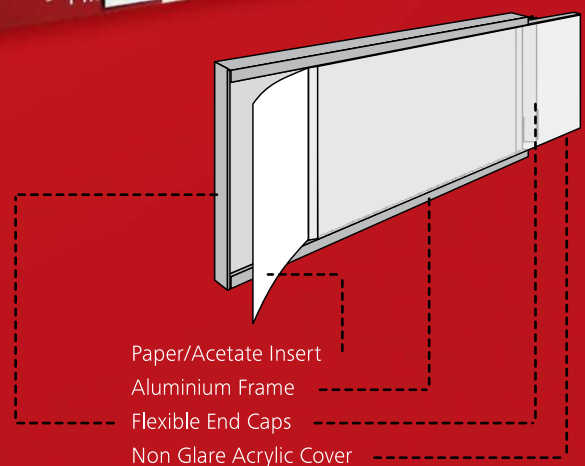

A4 & A5 BULLETIN BOARDS

BB A4P
210 x 297




BB A4L
297 x 210



BB A5P
148 x 210



BB A5L
210 x 148




These dimensions are the paper sizes.
Overall dimensions are larger.

Please contact S2K Identity Systems for exact sizes.

BB 2A4P
Header 210 x 42
Window 210 x 297



BB 2A4L
Header 297 x 42
Window 297 x 210

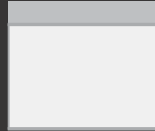

The above units are designed to accommodate standard paper sizes. The overall dimensions of the above units are larger than the sizes listed.

For sizes larger than A4, please refer to the Poster Holder Series by S2K Identity Systems.

POSSIBLE USES

- Meetings, conferences, timing or dates
- Staff Identification
- Schedules
- Evacuation procedures
- Internal distribution information
- Workstation Identification
- Opening hours
- Hospital/Patient Identification
- Name plates
- Instructions
- Menus
- Price lists
- Phone extensions / lists
- Staff Notices

COLOUR & DESIGN

In standard format Bulletin Boards are available in Satin Natural Anodised finish.

The flexible End Caps are matte grey plastic designed to coordinate with the Satin Natural Finish.

The aluminium section of the unit can be painted to your preferred colour. All painting must be completed in house by S2K prior to assembly in order to maintain quality standards. Please specify a PMS code for colour matching.

End Caps should only be painted if they will not be opened regularly as paint will wear with frequent use.

MOUNTING & INSTALLATION OPTIONS

- Doubled sided foam tape
- Silicone adhesive
- Counter sunk screw fixing
- Velcro
- Z Brackets - A4 size only.
- Desk Stand
- Workstation Bracket - Various

These options are subject to the size and the weight of the unit.

ORDERING & SPECIFYING

To order or specify a Bulletin Board please include the following:

- 1 Quote the code of one of the standard units in this brochure
- OR
- 2 For design of your choice please nominate the following items:

- AM Series Header (if required)
- Size and code of chosen Bulletin Board (See standard sizes on page four)
- AM Series Footer (if required)

If you require specific technical information or product details please contact S2K Identity Systems.

A4P Bulletin Board with 42mm Footer with Slider Insert and Slider Plate



A4P Bulletin Board open



A5P Bulletin Board

Phone directory	
TEAM MEMBER	EXTENSION
Derek Harper	30
Fiona Andrews	31
Brenda Roy	32
Barry Williams	33
Linda Brooke	34
Gary Letterman	35
Will Basker	36
Graeme Schwartz	37
Susie Wilkins	38
Jessie Macdonald	39
Harry James	40
David O'Brian	41
Cynthia Goldstein	42
Joan Martin	43
Sonia Silver	44
John Packer	45

Coloured paper insert



Acetate insert with vinyl graphics



Plain paper insert



BULLETIN BOARD SERIES - SIZES

Sign Code: C3.3

B 105MM

	B3	B4	B5	B6
Window	105 × 63	105 × 84	105 × 105	105 × 126

C 157.5 MM


	C3	C4	C5	C6
Window	157.5 × 63	157.5 × 84	157.5 × 105	157.5 × 126

D 210MM

	D3	D3/s	D4	D5	D6
Window	210 × 63	210 × 63	210 × 84	210 × 105	210 × 126

E 262.5MM

	E3	E3/s	E4	E5	E6
Window	262.5 × 63	262.5 × 63	262.5 × 84	262.5 × 105	262.5 × 126

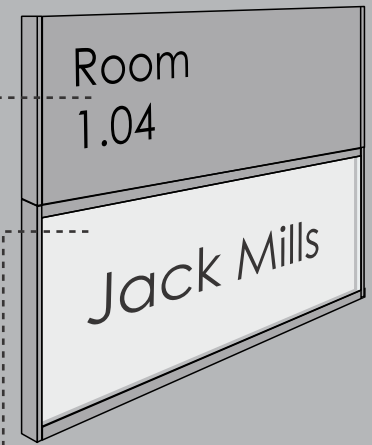

AM Series Header
157.5mm Wide (C) × 63mm High (3)
Bulletin Board Window
157.5mm Wide (C) × 63mm High (3)

BULLETIN BOARDS WITH ARCHITECTURAL MODULAR SERIES HEADERS

B 105MM

	B1.3	B2.3	B1.4	B2.4	B1.5	B2.5	B2.6
Header	105 × 21	105 × 42	105 × 21	105 × 42	105 × 21	105 × 42	105 × 42
Window	105 × 63	105 × 63	105 × 84	105 × 84	105 × 105	105 × 105	105 × 126

C 157.5 MM

	C1.3	C2.3	C2.4	C3.3	C2.5
Header	157.5 × 21	157.5 × 42	157.5 × 42	157.5 × 63	157.5 × 42
Window	157.5 × 63	157.5 × 63	157.5 × 84	157.5 × 63	157.5 × 105

D 210MM

	D2.3	D2.3/s	D2.4	D2.5	D2.6
Header	210 × 42	210 × 42	210 × 42	210 × 42	210 × 42
Window	210 × 63	210 × 63	210 × 84	210 × 105	210 × 126

E 262.5MM

	E2.3	E2.3/s	E2.4	E2.5
Header	262.5 × 42	262.5 × 42	262.5 × 42	262.5 × 42
Window	262.5 × 63	262.5 × 63	262.5 × 84	262.5 × 105

PRODUCT QUALITY


At S2K Identity Systems, our reputation has been built upon the manufacture of products of exceptional quality.

In keeping with this policy, the Bulletin Board Series has been developed to meet the highest standard specifications at a realistic cost. Materials of superior quality are used in the manufacture of each unit to ensure maximum usage over an extended period of time.

Whilst quality is of paramount importance, we believe that customers need choice. That is why we offer an extensive range of sizes, each designed with the customers needs in mind.

As Australia's longest standing producer of modular signage and display systems, S2K Identity Systems is committed to the continued development of its product range.

Header Window

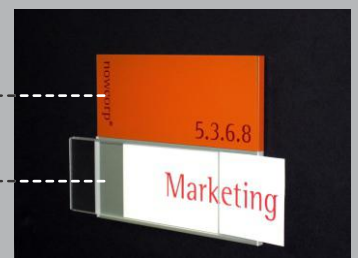

SIZE GUIDELINES

- The above diagrams are indicative of the selection of options available. There are many more options possible, please contact us with your preferred design.
- Width Increments are multiples of 52.5mm
Height Increments are multiples of 21mm
- Smallest Size available is 105mm Wide X 63mm High.
Largest Size available is A4 – See page three for details.
- Please add 3mm to the overall width of the above sizes. This allows for Sidelocks and/or flexible End Caps. Actual paper sizes will be different to sign sizes.

For sizes A4 and larger, please refer to our Poster Holder Series.

CONTACT DETAILS

S2K Identity Systems
9 Lennox Street,
Moorabbin, Victoria,
Australia 3189

T: 613 9555 7473
F: 613 9555 7579
E: info@s2k.com.au
W: www.s2k.com.au

Distribution: Australia, USA,
Canada, Asia and New Zealand.

S2K
IDENTITY SYSTEMS