

Vertex Series



Suspended & Wall Mounted Sign System



VERTEX SERIES

The Vertex Series is a simple ceiling suspended and wall mounted sign system. It is designed to be lighter and easier to update than other systems of its kind.

Vertex Series can accept a range of insert panels, thus offering you more choice with your design and graphic options.

The aluminium frame is designed to accept a variety of sheet materials that can be changed over, if and when desired.

The flexible End Caps make it simple to slide the sheet material in and out of the frame.

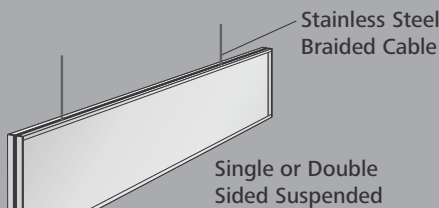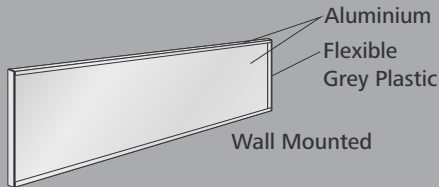

Slide your selected panel material into the frame/channel with completed graphics.

FINISH

- Frame - The Standard finish is clear anodised aluminium.
- End Caps - Grey (Flexible Plastic)
- Painting - Both the frame and the End Caps can be painted if required.

INSTALLATION

The Vertex Series is supplied with stainless steel braided wire.


Method of attachment to the ceiling to be advised by the sign installer. Various connectors are available.

Vertex Series can be wall mounted or flag mounted if desired. Please advise if suspension wires are not required.

HOW TO OPERATE

To change the inserts over, just slide the panel out to one side and the End Cap will flex open enabling removal.

Repeat in reverse to re-insert the new panel.

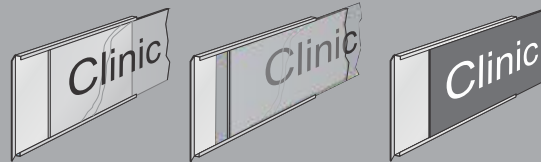

SIZES

Vertex Series is available in the following sizes:

Channel Height Options:

- 80mm, 100mm, 120mm, 150mm, 180mm

Channel Width Options:

- 450mm, 550mm, 650mm, 750mm, 900mm,
- 1100mm, 1300mm, 1500mm.

Multiple Inserts - just add as many channel sections as you require.

OPTIONAL INSERT PANELS

- Aluminium Plate 1 - 2mm thick (From S2K)
- Clear Acrylic 1 - 2mm thick (From S2K)
- Coloured Acrylic 1 - 2mm thick (By Others)
- Alucabond 1 - 2mm thick (By Others)
- Stainless Steel 1 - 2mm thick (By Others)
- Or any other sheet material of above thickness

POSSIBLE USES

- Wayfinding
- Area Identification
- Directional Signs
- Door Signs
- Public Information
- Corporate or Retail Signage

- Choose Your Preferred Panel Material
- Vertex Series can be wall mounted
- Vertex Series can be flag mounted (projecting)



Wall Mount



Aluminium Panel Insert



Clear Acrylic Panel Insert with Reverse Cut Vinyl



Projecting / Flag Mount



Coloured Acrylic Panel Insert

CONTACT DETAILS

S2K Identity Systems
9 Lennox Street, Moorabbin, Victoria, Australia 3189
T. 613 9555 7473 F. 613 9555 7579
E. info@s2k.com.au W. www.s2k.com.au

S2K
IDENTITY SYSTEMS